2 LEGS CENTER SUPPORT TWIN/FULL/QUEEN ASSEMBLY INSTRUCTIONS

Step 1

Insert GLIDE ASSEMBLIES into each LEG of the angle bars until PLASTIC SOCKETS are fully seated. Figure 1

Step 2

Slide C-clamp onto end of angle bar Figure 2 (A), overlap angle bars and slide C-clamp onto both angle bars as shown in Figure 2 (B)

Step 3

Place assembled center support between side rails as shown in Figure 3.

Step 4

Adjust width of CENTER SUPPORT to fit between SIDE RAILS and thight the bolt on the C-clamp. Figure 4.

Step 5


Secure CENTER SUPPORTS to SIDE RAILS as shown in Figure 5

Step 6

Adjust glides to clear floor or carpet surface by 1/8 inch. Lock glides in place by turning wing nuts thight against the plastic insterts.



SILVER PRODUCTS

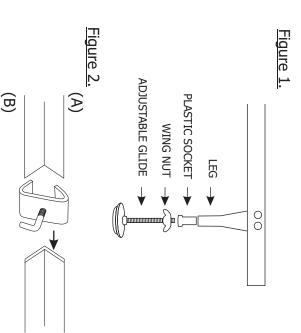

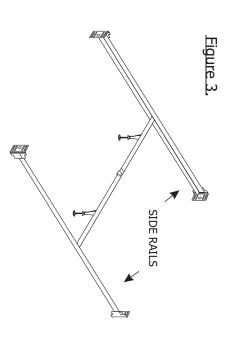


Figure 4.


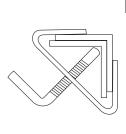


Figure 5.

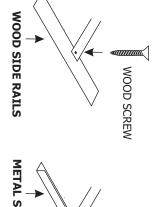

BOLT

METAL SIDE RAILS

NUT